GT-S5600H

user manual

SAMSUNG

using this manual

Thank you for purchasing this Samsung mobile phone. This phone will provide you with high quality mobile communication and entertainment based onSamsung's high technology and standards.

This user manual has been specially designed to guide you through the functions and features of your mobile phone. To get started quickly, refer to "introducing your mobile phone," "assembling and preparing your mobile phone," and "using basic functions."

- Please read this manual carefully before using your phone to ensure safe and correct use.
- The descriptions in this manual are based on the default settings of your phone.

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:

Warning—situations that could cause injury to yourself or others

Caution—situations that could cause damage to your phone or other equipment

Note—notes, usage tips, or additional information

▶ **Refer to**—pages with related information; for example: ▶ p. 12 (represents "see page 12")

→ **Followed by**—the order of options or menus you must select to perform a step; for example: In Menu mode, select **Messages** → **Create message** (represents **Messages**, followed by **Create message**)

[ ] **Square brackets**—phone keys; for example: [ ] (represents the Power/ Menu exit key)

Copyright information

Rights to all technologies and products that comprise this device are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.

  Bluetooth QD ID: B015273.
- Java™ is a trademark of Sun Microsystems, Inc.
- Windows Media Player® is a registered trademark of Microsoft Corporation.

contents

safety and usage information 2
- Safety warnings 2
- Safety precautions 5
- Important usage information 7

introducing your mobile phone 11
- Unpack 11
- Phone layout 12
- Keys 13
- Display 14
- Icons 14

assembling and preparing your mobile phone 16
- Install the SIM or USIM card and battery 16
- Charge the battery 18
- Insert a memory card (optional) 20

using basic functions 22
- Turn your phone on and off 22
- Use the touch screen 23
- Access menus 24

Switch applications 24
Use widgets 25
Access help information 25
Customise your phone 26
Use basic call functions 28
Send and view messages 29
Add and find contacts 32
Use basic camera functions 33
Listen to music 35
Browse the web 36

using advanced functions 38

Use advanced call functions 38
Use advanced phonebook functions 41
Use advanced messaging functions 42
Use advanced camera functions 43
Use advanced music functions 46

using tools and applications 49

Use the Bluetooth wireless feature 49
Activate the mobile tracker 51
Make fake calls 51
Record and play voice memos 52
Edit images 53
Print images 55
Upload photos and videos to the web 55
Use Java-powered games and applications 56
Use RSS reader 57
View world clocks 58
Set and use alarms 59
Use the calculator 60
Convert currencies or measurements 60
Set a countdown timer 60
Use the stopwatch 61
Create a new task 61
Create a text memo 61
Manage your calendar 61

overview of menu functions ..... a

troubleshooting ..... b

safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your mobile phone.

Safety warnings

WARNING

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing

Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

WARNING

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Do not use the phone if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hands and face. Bring the phone to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.

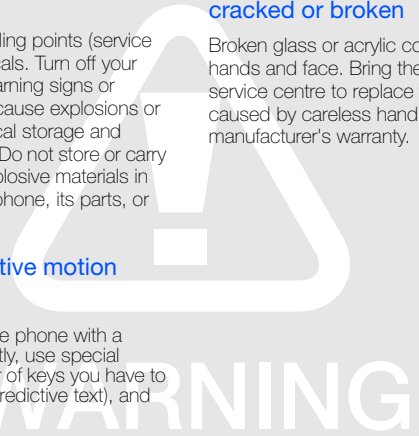

Safety precautions

CAUTION

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not disassemble your phone due to a risk of electric shock.
- Do not allow your phone to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- If your phone has a camera or light, avoid using it close to the eyes of children or animals.

CAUTION

- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.

- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram.

Disclaimer

Some contents and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES."

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

introducing your mobile phone

In this section, learn about your mobile phone's layout, keys, display, and icons.

Unpack

Check your product box for the following items:

- Mobile phone
- Battery
- Travel adapter (charger)
- User manual

- The items supplied with your phone may vary depending on the software and accessories available in your region or offered by your service provider.
- You can obtain additional accessories from your local Samsung dealer.
- Use only Samsung-approved software. Pirated or illegal software may cause damage or malfunctions that are not covered by manufacturer's warranty.

Phone layout

The front of your phone includes the following keys and features:

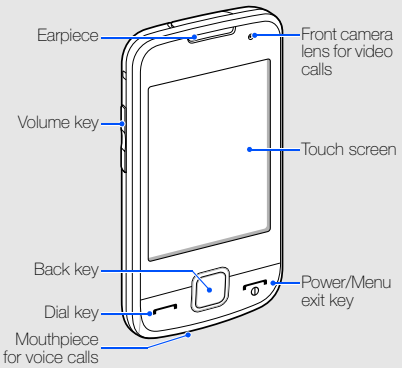

The rear of your phone includes the following keys and features:

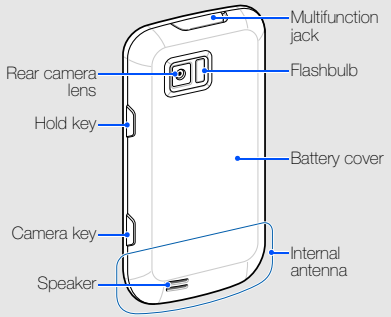

You can lock the touch screen and keys to prevent any unwanted phone operations. To lock, press the Hold key.

Keys

Key	Function
Dial	Make or answer a call; In Idle mode, retrieve recently dialled, missed, or received numbers
Back	In Menu mode, return to the previous level; Open the application switch window to access other applications without exiting the current application (press and hold)
Power/ Menu exit	Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
Volume	Adjust the phone's volume; In Idle mode, press and hold the Volume key down to make a fake call

Key	Function
Hold	Lock or unlock the touch screen and keys
Camera	In Idle mode, turn on the camera; In Camera mode, take a photo or record a video

Display

Your phone's display consists of three areas:

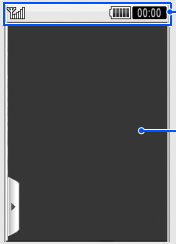

Icons

Learn about the icons that appear on your display.

Icon	Definition
	Signal strength
	GPRS network connected
	EDGE network connected
	UMTS network connected
	HSDPA network connected
	Voice call in progress
	Video call in progress
	Browsing the web
	Connected to secured web page

Icon	Definition
	Call diverting activated
	Bluetooth activated
	Bluetooth hands-free car kit or headset connected
	Synchronised with PC
	New text message (SMS)
	New multimedia message (MMS)
	New email message
	New voice mail message

Icon	Definition
	New push message
	New configuration message
	Alarm activated
	Memory card inserted
	Normal profile activated
	Silent profile activated
	Battery power level
10:00	Current time

assembling and preparing your mobile phone

Get started by assembling and setting up your mobile phone for its first use.

Install the SIM or USIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module, or SIM card, with subscription details, such as your personal identification number (PIN) and optional services.

To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card.

To install the SIM or USIM card and battery,

1. Remove the battery cover.

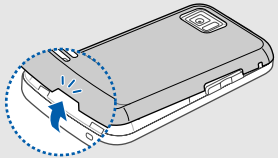

If the phone is on, press and hold [ ] to turn it off.

2. Insert the SIM or USIM card.

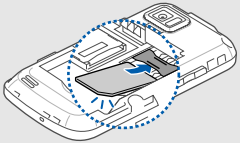

- Place the SIM or USIM card in the phone with the gold-coloured contacts facing down.
- Without inserting a SIM or USIM card, you can use your phone's non-network services and some menus.

3. Insert the battery.

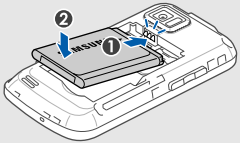

4. Replace the battery cover.

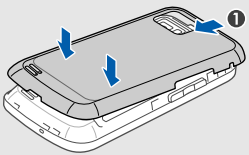

Charge the battery

Before using the phone for the first time, you must charge the battery.

1. Open the cover to the multifunction jack.
2. Plug the small end of the travel adapter into the multifunction jack.

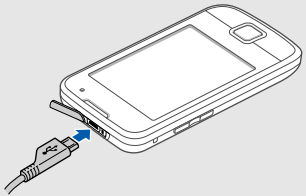

CAUTION

Improperly connecting the travel adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

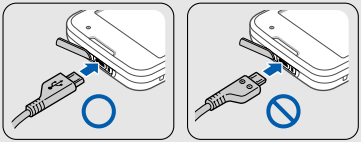

3. Plug the large end of the travel adapter into a power outlet.
4. When the battery is fully charged (the icon is no longer moving), unplug the travel adapter from the power outlet.

To ensure peak performance of your battery, fully charge and discharge (use until empty) the battery the first two or three times.

5. Unplug the travel adapter from the phone.
6. Close the cover to the multifunction jack.

About the low battery indicator

When your battery is low, the phone will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the phone will automatically power off. Recharge your battery to continue using your phone.

Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ or microSDHC™ memory cards up to 8 GB (depending on memory card manufacturer and type).

Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.

1. Remove the battery cover and the battery.
2. Unlock the memory card cover.

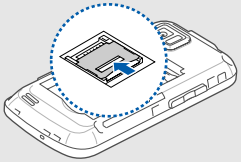

3. Lift the memory card cover and insert a memory card with the label side facing up.

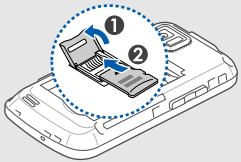

4. Close and lock the memory card cover.

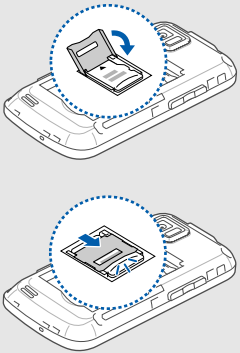

5. Insert the battery.
6. Replace the battery cover.

To remove the memory card, open the memory card cover and remove the memory card.

using basic functions

Learn how to perform basic operations and use the main features of your mobile phone.

Turn your phone on and off

To turn your phone on,

1. Press and hold [ ].
2. Enter your PIN and select **Confirm** (if necessary).

To turn your phone off, repeat step 1above.

Switch to the offline profile

By switching to the offline profile, you can use your phone's non-network services in areas where wireless devices are prohibited, such as aeroplane and hospitals.

To switch to the offline profile, in Menu mode, select **Settings** → **Phone profiles** → **Offline**.

Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

Use the touch screen

Your phone's touch screen lets you easily select items or perform functions.

Learn basic actions to use the touch screen.

For the optimal use of the touch screen, remove the screen protection film before using your phone.

CAUTION

Do not allow the touch screen to come in contact with conductive elements, such as water. The touch screen may react to these types of elements.

- Touch an icon to open a menu or launch an application.



- Drag your finger up or down to scroll through vertical lists.

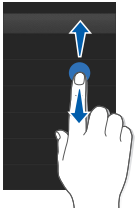

- Drag your finger left or right to scroll through horizontal lists.

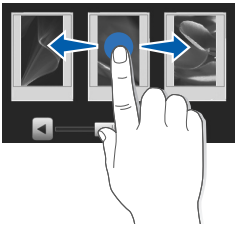

Access menus

To access your phone's menus,

1. In Idle mode, select **Menu** to access Menu mode.
2. Press a menu icon → a menu or option.
3. Press the Back key to move up one level; Press [ ] to return to Idle mode.

Switch applications

Learn to switch to other applications from a menu, without closing the menu screen you are using.

To switch applications,

1. While using a menu, press and hold the Back key.
   The following applications are available:
   - **Call**: open the dialing screen
   - **Music player**: launch the music player
   - **Messages**: access the **Messages** menu
   - **Browser**: launch the web browser
   - **Main menu**: access the main menu screen
2. Select an application.

Use widgets

Learn to use widgets on the toolbar.

- Some of your widgets connect to web services. Selecting a web-based widget may incur additional charges.
- Available widgets may vary depending on your region or service provider.

Open the toolbar

In Idle mode, select the arrow at the bottom left of the screen to open the toolbar. You can rearrange widgets on the toolbar or move them to the idle screen.

Depending on your region or service provider, available widgets may vary.

Move the widgets to the idle screen

1. Open the toolbar.
2. Drag a widget from the toolbar to the idle screen. You can position the widget anywhere on the screen.

Change the widgets

1. In Menu mode, select **Settings** → **Display and light** → **Widget**.
2. Select the widgets you want to include to the toolbar and select **Save**.

Access help information

Learn to access helpful information about your phone.

1. Open the toolbar.
2. Press [?] from the toolbar.

3. Rotate the phone anti-clockwise to landscape view.
4. Select a help topic to learn about an application or feature.
5. Drag your finger to the right or left to get more information. To return to the previous level, press .

Customise your phone

Get more from your phone by customising it to match your preferences.

Adjust the volume of the key tones

In Idle mode, press the Volume key up or down and adjust the key tone volume.

Adjust the vibration intensity on the touch screen

You can adjust the intensity of the vibration when you tap the phone screen.

Switch to or from the silent profile

In Idle mode, select **Keypad** and select and hold # to silence or unsilence your phone.

Change your ringtone

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Press next to a profile you want.
3. Select **Voice call ringtone** or **Video call ringtone**.

4. Select a ringtone from the list and select **Save**.
5. Select **Save**.

To switch to another profile, select it from the list.

Select a wallpaper (Idle mode)

1. In Menu mode, select **Settings** → **Display and light** → **Wallpaper**.
2. Scroll left or right to an image.
3. Select **Set**.

Lock your phone

1. In Menu mode, select **Settings** → **Security**.
2. Select **On** under **Phone lock**.
3. Enter a new 4- to 8-digit password and select **Confirm**.
4. Enter the new password again and select **Confirm**.

- The first time you access a menu that requires a password, you will be prompted to create and confirm a password.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Unlock the touch screen with smart unlock

By drawing a specified character on the locked touch screen, you can unlock the screen only, unlock and then make a call to a speed dial number, or unlock and then launch an application. To set a smart unlock character,

1. In Menu mode, select **Settings** → **Smart unlock**.

2. Select **On** under **Gesture unlock**.
3. Select an unlock option.
4. Select a speed dial number to dial or select an application to launch (if necessary).
5. Select a character for the smart unlock feature.
6. Press the Back key.
7. Select **Save**.

Use basic call functions

Learn to make or answer calls and use basic call functions.

During a call, your phone automatically locks the touch screen to prevent accidental inputs. To unlock, press and hold the Hold key.

Make a call

1. In Idle mode, select **Keypad** and enter an area code and a phone number.
2. Press → **Voice call** or press [ ] to dial the number.
   For a video call, press → **Video call**.
3. To end the call, press [ ].

Answer a call

1. When a call comes in, press [ ].
2. For a video call, press [ ] and select **Show me** to allow the caller to see you via the front camera lens.
3. To end the call, press [ ].

You can reject incoming calls by using the auto rejection; in Menu mode, select **Settings** → **Application settings** → **Call** → **All calls** → **Auto reject** → **On**. Then set up the reject list and select numbers to reject.

Adjust the volume

To adjust the volume during a call, press the Volume key up or down.

Use the speakerphone feature

1. During a call, select **Speaker** → **Yes** to activate the speaker.
2. To switch back to the earpiece, press **Speaker**.

In noisy environment, you may have difficulty hearing the calls while using the speakerphone feature. For better performance, use the normal phone mode.

Use the headset

By plugging the supplied headset into the phone, you can make and answer calls:

- To redial the last call, press the headset button, and then press again and hold.
- To answer a call, press the headset button.
- To end a call, press and hold the headset button.

Send and view messages

Learn to send or view text (SMS), multimedia (MMS), or email messages.

Send a text or multimedia message

1. In Menu mode, select **Messages** → **Create message** → **Message**.
2. Select **Tap to add recipient** → **Enter manually**.

3. Enter a destination number and select **Done**.
4. Select **Tap to add text**.
5. Enter your message text and select **Done**.
   ▶ Enter text
   For sending as a text message, skip to step 7.
   For attaching multimedia, continue with step 6.
6. Select **Add media** → an item type → an item.
7. Select **Send** to send the message.

Send an email

1. In Menu mode, select **Messages** → **Create message** → **Email**.
2. Select **Tap to add recipient** → **Enter manually**.
3. SelectEnter an email address and select **Done**.
4. Select **Tap to add subject**.
5. Enter a subject and select **Done**.
6. Select **Tap to add text**.
7. Enter your email text and select **Done**.
8. Select **Add files** → an item type and attach a file (if necessary).
9. Select **Send** to send the message.

Enter text

When entering text, you can change the text input mode:

- To select a text input mode in Chinese, select **PY**.
- To switch to English mode, select **ENG**.
- To change case in English mode, select **Abc**.
- To enter text in T9 mode, select **T9** on the bottom line of the screen. **T9** turns blue.
- To switch to 123 mode, select **123**.
- To switch to Symbol mode, select .

Enter text in one of the following modes:

Mode	Function
PY	1. Select the appropriate virtual keys to enter pinyins. 2. Select a pinyin. 3. Select **0**. A number appears by each character. 4. Select ◀ or ▶ to scroll to a character. 5. Select the character you want.
S STR	1. Select **1** through **5** to enter strokes. Select **6** when you are unsure which stroke to enter. This will insert a placeholder. 2. Select ◀ or ▶ to scroll to a character. 3. Select the character you want.
T STR	1. Select **1** through **5** to enter strokes. Select **6** when you are unsure which stroke to enter. This will insert a placeholder. 2. Select ◀ or ▶ to scroll to a character. 3. Select the character you want.
Abc	Select the appropriate virtual key until the character you want appears on the display.
T9	1. Select the appropriate alphanumeric keys to enter an entire word. 2. When the word displays correctly, select ␣ to insert a space. If the correct word does not display, select an alternate word from the list that appears.
123	Select an appropriate virtual key to enter a number.

Mode	Function
Symbol	Select an appropriate virtual key to enter a symbol.

View text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.

View an email

1. In Menu mode, select **Messages** → **Email inbox**.
2. Select an account.
3. Select **Download**.
4. Select an email or a header.
5. If you selected a header, select **Retrieve** to view the body of the email.

Add and find contacts

Learn the basics of using the phonebook feature.

Add a new contact

1. In Idle mode, select **Keypad** and enter a phone number.
2. Press → **Add to phonebook** → **New**.
3. Select **Phone** or **SIM**.
4. Enter contact information.
5. Select **Save** to add the contact to memory.

Find a contact

1. In Menu mode, select **Phonebook**.
2. Select the search field, enter the letter of the name you want to find. You can also drag to select the first letter of the name.

3. Select the contact's name from the search list.

Once you have found a contact, you can:

- call the contact by selecting or pressing
- edit the contact information by selecting **Edit**

Use basic camera functions

Learn the basics to capture and view photos and videos.

Capture photos

1. In Idle mode, press the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
   - To turn the flash on or off, select .
   - To set the brightness, select .
4. Press the Camera key to take a photo.
   The photo is saved automatically.

After capturing photos, select to view photos.

View photos

In Menu mode, select **My files** → **Images** → **My photos** → a photo file.

- Rotate the phone anti-clockwise to landscape view.
- Tilt the phone to the left or right. Photos will scroll left or right automatically.
- Select → or to zoom in or out. Press the Back key to exit the zoom screen.

To categorise and view photos in a wide view,

1. In Menu mode, select **Photo browser**.
2. Rotate the phone anti-clockwise to landscape view.
3. Select → a category to categorise the photos.
4. Scroll left or right to view photos.
   Tilt the phone to the left or right. Photos will scroll left or right automatically.

Capture videos

1. In Idle mode, press the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Select → to switch to Recording mode.
4. Aim the lens at the subject and make any adjustments.
   - To turn the flash on or off, select .
   - To set the brightness, select .
5. Press the Camera key to start recording.
6. Select or press the Camera key to stop recording.
   The video is saved automatically.

After capturing videos, select to view videos.

View videos

In Menu mode, select **My files** → **Videos** → **My video clips** → a video file.

Rotate the phone anti-clockwise to landscape view.

Listen to music

Learn how to listen to music via the music player or FM radio.

Listen to the FM radio

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select **Applications** → **FM radio**.
3. Select **Yes** to start automatic tuning.
   The radio scans and saves available stations automatically.

The first time you access the FM radio, you will be prompted to start automatic tuning.

4. Control the FM radio using the following icons:

Icon	Function
AF	Set your phone to re-tune frequencies for stations
	Change the sound output
	Tune a radio station; Select a saved radio station (tap and hold)
	Start the FM radio
	Turn off the FM radio

Listen to music files

Start by transferring files to your phone or memory card:

- Download from the wireless web. ▶ p. 37
- Download from a PC with the optional Samsung PC Studio. ▶ p. 46
- Receive via Bluetooth. ▶ p. 50

- Copy to your memory card. ▶ p. 46
- Synchronise with Windows Media Player 11. ▶ p. 46

After transferring music files to your phone or memory card,

1. In Menu mode, select **Music** → **Music player**.
2. Select a music category → a music file.
3. Control playback using the following icons:

Icon	Function
	Pause playback
	Play playback
	Skip backward; Scan backward in a file (select and hold)
	Skip forward; Scan forward in a file (select and hold)
NORM	Change the sound effect
	Change the repeat mode
	Activate Shuffle mode

To adjust the volume, press the Volume key.

Browse the web

Learn to access and bookmark your favourite web pages.

- You may incur additional charges for accessing the web and downloading media.
- The browser menu may be labelled differently depending on your service provider.
- Available icons may vary depending on your region or service provider.

Browse web pages

1. In Menu mode, select **Browser** → **Home** to launch your service provider's homepage.
2. Navigate web pages using the following icons:

Icon	Function
	Move backward or forward on a web page
	Refresh the current web page
	Return to the homepage
	Open a list of saved bookmarks
	Change the view mode
	Access a list of browser options

Bookmark your favourite web pages

1. In Menu mode, select **Browser** → **Bookmarks**.
2. Select **Add**.
3. Enter a page title and a web address (URL).
4. Select **Save**.

using advanced functions

Learn how to perform advanced operations and use additional features of your mobile phone.

Use advanced call functions

Learn about your phone's additional calling capabilities.

View and dial missed calls

Your phone will display calls you have missed on the display. To dial the number of a missed call,

1. Select the missed call you want to dial from the event alert widget.
2. Press [ ] to dial.

Call a recently dialled number

1. In Idle mode, press [ ] to display a list of recent numbers.
2. Scroll to the number you want and press [ ] to dial.

Hold a call or retrieve a held call

Select **Hold** to place a call on hold or select **Retrieve** to retrieve a held call.

Dial a second call

If your network supports this function, you can dial another number during a call:

1. Select **Hold** to place the first call on hold.
2. Enter the second number to dial and press [ ].
3. Select **Swap** to switch between the two calls.
4. To end the call on hold, select **On hold** and press [ ].
5. To end the current call, press [ ].

Answer a second call

If your network supports this function, you can answer a second incoming call:

1. Press [ ] to answer the second call.
   The first call is automatically placed on hold.
2. Select **Swap** to switch between the calls.

Make a multiparty call (conference call)

1. Call the first party you want to add to the multiparty call.
2. While connected to the first party, call the second party.
   The first party is automatically placed on hold.
3. When connected to the second party, select **Join**.
4. In Menu mode, selectRepeat steps 2 and 3 to add more parties (if necessary).
5. To end the multiparty call, press [ ].

Call an international number

1. In Idle mode, select **Keypad** and select and hold **0** to insert the **+** character.
2. Enter the complete number you want to dial (country code, area code, and phone number), and then press [ ] to dial.

Call a contact from the phonebook

You can call numbers directly from the phonebook using stored contacts. ▶ p. 32

1. In Menu mode, select **Phonebook**.
2. Scroll to the number you want to dial and select or press [ ] to dial.

Reject a call

To reject an incoming call, press [ ]. The caller will hear a busy tone.

To reject calls from certain numbers automatically, use the auto rejection. To activate the auto rejection and set up the reject list,

1. In Menu mode, select **Settings** → **Application settings** → **Call** → **All calls** → **Auto reject**.
2. Select **On** under **Activation**.
3. Select **Add number**.
4. Select the number input field.
5. Enter a number to reject and select **Done**.
6. Select the check box next to the number.
7. Select **Save**.

Use advanced phonebook functions

Learn to create namecards, set speed dial numbers, and create groups of contacts.

Create a namecard

1. In Menu mode, select **Phonebook**.
2. Select **More** → **My namecard**.
3. Enter your personal details and select **Save**.

You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature.

Add contacts to Favourites

1. In Menu mode, select **Phonebook**.
2. Select the **Contacts** drop-down menu and select **Favourites**.
3. Select **Add**.
4. Select a contact.

The first five speed dial numbers will be assigned to the favourite contacts ( ) on the widget toolbar.

Create a group of contacts

By creating groups of contacts, you can assign ringtones and caller ID photos to each group or send messages or emails to an entire group. Start by creating a group:

1. In Menu mode, select **Phonebook**.
2. Select the **Contacts** drop-down menu and select **Groups**.
3. Select **Create group**.
4. Set a group name, the caller ID photo, a group ringtone, and vibration type.
5. Select **Save**.

Make calls or send messages from photos

1. In Menu mode, select **Photo contacts** to access photo contact screen.
2. Scroll up or down to a photo.
   The face tag appears with the name.
3. Select the face tag → Voice call, Video call, or Send message.

Use advanced messaging functions

Learn to create templates and use templates to create new messages.

Create a text template

1. In Menu mode, select **Messages** → **Templates** → **Text templates**.
2. Select **Create** to open a new template window.
3. Select the screen.
4. Enter your text and select **Done**.
5. Select **Save**.

Create a multimedia template

1. In Menu mode, select **Messages** → **Templates** → **Multimedia templates**.
2. Select **Create** to open a new template window.
3. Create a multimedia message, with a subject and desired attachments, to use as your template. ▶ p. 29
4. Select **Save**.

Insert text templates in new messages

1. To start a new message, in Menu mode, select **Messages** → **Create message** → a message type.

2. In the text field, Select **More** → **Insert** → **Text template** → a template.

Create a message from a multimedia template

1. In Menu mode, select **Messages** → **Templates** → **Multimedia templates**.
2. Scroll to the template you want and select . Your template opens as a new multimedia message.

Create a folder to manage messages

1. In Menu mode, select **Messages** → **My folders**.
2. Select **Create folder**.
3. Enter a new folder name and select **Done**.

Move messages from a message box to your folders to manage them as your preferences.

Use advanced camera functions

Learn how to capture photos in various modes and customise camera settings.

Capture photos in Smile shot mode

1. In Idle mode, press the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Select → **Smile shot**.
4. Make any necessary adjustments.
5. Press the Camera key.
6. Aim the camera lens at your subject.
   Your phone recognises people in an image and detects their smiles. When the subject smiles, the phone automatically takes a photo.

Capture a series of photos

1. In Idle mode, press the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Select → **Continuous**.
4. Make any necessary adjustments.
5. Press and hold the Camera key to take a series of photos.

Capture panoramic photos

1. In Idle mode, press the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Select → **Panorama**.
4. Make any necessary adjustments.
5. Press the Camera key to take the first photo.
6. Slowly move the phone to the direction you want. The phone captures the next photo automatically.
7. Repeat step 6 to complete the panoramic photo.

Use camera options

Before capturing a photo, select to access the following options:

Option	Function
Timer	Select the time delay
Resolution	Change the resolution option
White balance	Adjust the colour balance
Effects	Apply a special effect
Exposuremeter	Select a type of exposure metre
Image quality	Adjust the quality of your photos

Before capturing a video, select ⚙ to access the following options:

Option	Function
Timer	Select the time delay
Resolution	Change the resolution option
White balance	Adjust the colour balance
Effects	Apply a special effect
Video quality	Adjust the quality of your video clips

Customise camera settings

Before capturing a photo, select ⚙ → ⚙ to access the following settings:

Setting	Function
Guidelines	Display the guidelines
Review	Set the camera to switch to the preview screen after capturing photos
Shutter sound	Select a sound to accompany the shutter action
Storage	Select a memory location to store new photos

Before capturing a video, select ⚙ → ⚙ to access the following settings:

Setting	Function
Guidelines	Display the guidelines
Audio recording	Turn the audio on or off
Storage	Select a memory location to store new video clips

Use advanced music functions

Learn to prepare music files, create playlists, and store radio stations.

Copy music files via Samsung PC Studio

1. In Menu mode, select **Settings** → **Phone settings** → **PC connections** → **Samsung PC studio** or **Mass storage** → **Save**.
2. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.
3. Run Samsung PC Studio and copy files from the PC to the phone.
   Refer to the Samsung PC Studio help for more information.

Copy music files to a memory card

1. Insert a memory card.
2. In Menu mode, select **Settings** → **Phone settings** → **PC connections** → **Mass storage** → **Save**.
3. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.
   When connected, a pop-up window will appear on the PC.
4. Open a folder to view files.
5. Copy files from the PC to the memory card.

Synchronise your phone with Windows Media Player

1. Insert a memory card.
2. In Menu mode, select **Settings** → **Phone settings** → **PC connections** → **Media player** → **Save**.

3. Press [☎] twice to return to Idle mode.
4. Using an optional PC data cable, connect the multifunction jack on your phone to a PC with Windows Media Player installed.

   When connected, a pop-up window will appear on the PC.
5. Open Windows Media Player to synchronise music files.
6. Edit or enter your phone's name in the pop-up window (if necessary).
7. Select and drag the music files you want to the sync list.
8. Start synchronisation.

Create a playlist

1. In Menu mode, select **Music** → **Music player** → **Playlists**.
2. Select **Create**.
3. Select the text input field.
4. Enter a title for your new playlist and select **Done**.
5. To assign an image to the playlist, select **Tap to edit** and select an image or capture a new photo.
6. Select **Save**.
7. Select the new playlist.
8. Select **Add** → **Tracks**.
9. Select the files you want to include and select **Add**.

Customise your music player settings

1. In Menu mode, select **Music** → **Music player**.
2. Select **Settings**.

3. Adjust the settings to customise your music player.
4. Select **Save**.

Store radio stations automatically

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select **Applications** → **FM radio**.
3. Press ▶ to start the FM radio.
4. Select **More** → **Self-tuning**.
5. Select **Yes** to confirm (if necessary).
   The radio scans and saves available stations automatically.

Find information of music

Learn to access an online music service and get information about the songs you hear while on the move.

1. In Menu mode, select **Music** → **Find music** → **Find music**.
   Your phone connects to the server.
2. When the phone is successfully registered, press ● to record a part of music you want to find.

Some service providers may not support this service and the database may not have information for all songs.

using tools and applications

Learn how to work with your mobile phone's tools and additional applications.

Use the Bluetooth wireless feature

Learn about your phone's ability to connect to other wireless devices for exchanging data and using hands-free features.

Turn on the Bluetooth wireless feature

1. In Menu mode, select **Applications** → **Bluetooth**.
2. Select the circle in the centre to turn on the Bluetooth wireless feature.
3. To allow other devices to locate your phone, select **Settings** → **On** under **My phone's visibility** → a visibility option → **Save** → **Save**.
   If you selected **Custom**, set duration that your phone is visible.

Find and pair with other Bluetooth-enabled devices

1. In Menu mode, select **Applications** → **Bluetooth** → **Search**.
2. Select and drag a device icon into the centre.
3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and select **Done**.
   When the owner of the other device enters the same code or accepts the connection, pairing is complete.

You may not need to enter a PIN depending on the device.

Send data using the Bluetooth wireless feature

1. Select the file or item from one of your phone's applications that you want to send.
2. Select **Send via** → **Bluetooth**.

Receive data using the Bluetooth wireless feature

1. Enter the PIN for the Bluetooth wireless feature and select **OK** (if necessary).
2. Select **Yes** to confirm that you are willing to receive data from the device (if necessary).

Use Remote SIM mode

In Remote SIM mode, you can make or answer calls only with a connected Bluetooth hands-free car kit via the SIM or USIM card on your phone.

To activate Remote SIM mode,

1. In Menu mode, select **Applications** → **Bluetooth** → **Settings**.
2. Select **Remote SIM mode** → **On**.
3. Select **Save**.

To use Remote SIM mode, start the Bluetooth connection from a Bluetooth hands-free car kit.

The Bluetooth hands-free car kit must be authorised. To authorise, select the device and select **Authorise device**.

Activate the mobile tracker

When someone inserts a new SIM or USIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone.

To activate the mobile tracker,

1. In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
2. Enter your password and select **Confirm**.
3. Select **On** to turn on the mobile tracker.
4. Select **Recipients** to open the recipient list.
5. Select the recipient field.
6. Enter a phone number and select **Done**.
7. Select **OK** to save the recipients.
8. Select **Sender**.
9. Enter the sender's name and select **Done**.
10. Select **Save** → **Accept**.

Make fake calls

You can simulate fake incoming calls when you want to get out of meetings or unwanted conversations. You can also make it appear as if you are talking on the phone by playing back a recorded voice.

Record a voice

1. In Menu mode, select **Settings** → **Application settings** → **Call** → **Fake call**.

2. Select **On** under **Fake call voice**.
3. Select **Voice recorder**.
4. Press to start recording.
5. Speak into the microphone.
6. When you are finished speaking, press .

Make a fake call

To make a fake call, press and hold the Volume key down in Idle mode.

Record and play voice memos

Learn to operate your phone's voice recorder.

Record a voice memo

1. In Menu mode, select **Applications** → **Voice recorder**.
2. Press to start recording.
3. Speak your memo into the microphone.
4. When you are finished speaking, press .
   Your memo is saved automatically.

Play a voice memo

1. From the voice recorder screen, press **My files** → **Sounds** → **Voice clips**.
2. Select a file.
3. Control the playback using the following icons:

Icon	Function
	Open the list of voice memos
	Pause playback
	Play playback
	Scan backward
	Scan forward

Edit images

Learn to edit images and apply fun effects.

Apply effects to images

1. In Menu mode, select **My files** → **Images** → **My photos** → a photo file.
2. Press .
3. Select **Edit** → **Effects** → an effect option.
4. Select a variation of the effect to apply and select **Done**.
   To apply a blur effect to a specific area of an image, Select **Partial blur** → move or resize the rectangle → **Blur** → **Done**.
5. When you are finished with applying effects, select **Files** → **Save as**.
6. Select a memory location (if necessary).
7. Enter a new file name for the image and select **Done**.

Adjust an image

1. Open an image to be edited. Refer to steps 1-2 of “Apply effects to images.”
2. Select **Edit** → **Adjust** → an adjustment option (brightness, contrast, or colour).
   To adjust the image automatically, select **Auto level**.
3. Adjust the image as desired and select **Done**.
4. Save the edited image with a new file name. Refer to steps 5-7 of “Apply effects to images.”

Transform an image

1. Open an image to be edited. Refer to steps 1-2 of “Apply effects to images.”
2. Select **Edit** → **Transform** → **Resize**, **Rotate**, or **Flip**.

3. Rotate or flip the image as desired and select **Done**.
   To resize the image, select a size and select **Save** → **Done**.
4. Save the edited image with a new file name. Refer to steps 5-7 of “Apply effects to images.”

Crop an image

1. Open an image to be edited. Refer to steps 1-2 of “Apply effects to images.”
2. Select **Edit** → **Crop**.
3. Move the rectangle over the area you want to crop and select **Crop** → **Done**.
4. Save the edited image with a new file name. Refer to steps 5-7 of “Apply effects to images.”

Insert a visual feature

1. Open an image to be edited. Refer to steps 1-2 of “Apply effects to images.”
2. Select **Edit** → **Insert** → a visual feature (frame, image, clip art, emoticon, or text).
3. Select a visual feature or enter text and select **Done**.
4. Save the edited image with a new file name. Refer to steps 5-7 of “Apply effects to images.”

Add a memo

1. Open an image to be edited. Refer to steps 1-2 of “Apply effects to images.”
2. Select **Edit** → **Memo on screen**.
3. Select a colour and enter a memo on the screen and then select **Done**.

4. Save the edited image with a new file name. Refer to steps 5-7 of “Apply effects to images.”

Print images

Learn to print your image with an optional PC data cable or the Bluetooth wireless feature.

To print an image using an optional PC data cable,

1. Connect the multifunction jack on your phone to a compatible printer.
2. In Menu mode, select **My files** → **Images** → **My photos**.
3. Select **More** → **Print via** → **USB**.
4. Set print options and print the image.

To print an image using the Bluetooth wireless feature,

1. In Menu mode, select **My files** → **Images** → **My photos**.
2. Select **More** → **Print via** → **Bluetooth**.
3. Select a Bluetooth-enabled printer and pair with the printer. ▶ p. 49
4. Set print options and print the image.

Upload photos and videos to the web

Learn to post your photos and videos to photo sharing websites and blogs.

Depending on your region or service provider, **Communities** may not be available.

Set your favourite destination list

1. In Menu mode, select **Applications** → **Communities**.

2. Select **Yes** to set the favourite destination list.
3. Select **Accept** to confirm that you agree to the general disclaimer.

The first time you access **Communities**, you will be prompted to confirm.

4. Select the destinations you want to add and select **Save**.

   If you select **Update lists**, new destination sites are added to the list automatically.

To edit the favourite destination list or update the lists, from the communities screen, select **Settings** → **Preferred lists** → **Edit**.

Upload a file

To upload photos and videos, you must have accounts of photo sharing websites and blogs.

1. In Menu mode, select **Applications** → **Communities** → **Upload to web**.
2. Select a destination you want to post to.
3. Select **Tap to add** and select a media file.
4. Enter the title and information.
5. Select **Upload**.
6. Enter the user ID and password of the destination (if necessary).

Use Java-powered games and applications

Learn to use games and applications powered by award-winning Java technology.

The down load of java files may not be supported depending on the software of the phone.

Download games or applications

1. In Menu mode, select **Applications** → **Games and more** → **More games**.
   Your phone connects to the website preset by your service provider.
2. Search for a game or application and download it to the phone.

Play games

1. In Menu mode, select **Applications** → **Games and more**.
2. Select a game from the list and follow the on-screen instructions.

Available games may vary, depending on your region or service provider. Game controls and options may vary.

Launch applications

1. In Menu mode, select **Applications** → **Games and more** → an application.
2. Select **More** to access a list of various options and settings for your application.

Use RSS reader

Learn to use RSS reader to get the latest news and information from your favourite websites.

Create feeds

1. In Menu mode, select **Applications** → **RSS reader**.
2. Select **Add**.
3. Select the URL input field.

4. Enter the address of an RSS feed and select **Done**.
5. Select **OK**.

Read RSS feeds

1. In Menu mode, select **Applications** → **RSS reader**.
2. Select **Update** to get the latest contents.
3. Select a feed category → an updated feed.

Customise RSS reader settings

1. In Menu mode, select **Applications** → **RSS reader**.
2. Select **More** → **Settings** → **Network settings**.

View world clocks

Learn to view the time in another city and set world clocks to appear on your display.

View a world clock

1. In Menu mode, select **Organiser** → **World clock**.
2. Scroll through the world map and select a time zone you want.

Create a world clock

1. In Menu mode, select **Organiser** → **World clock**.
2. Press → **Add**.
3. Scroll left or right to a time zone.
4. To set daylight saving time, select .

5. Select **OK** to create your world clock.
   The world clock is set as the second clock.
6. To add more world clocks, repeat steps 2-5 above.

Add a world clock to your display

You can view clocks with two different time zones on your display.

After you have created world clocks,

1. In Menu mode, select **Organiser** → **World clock**.
2. Press [ ] → **Set as 2nd clock**.
3. Select the world clock you want to add.
4. Select **Set**.

Set and use alarms

Learn to set and control alarms for important events.

Set a new alarm

1. In Menu mode, select **Alarms**.
2. Select **Create alarm**.
3. Set alarm details.
4. Select **Save**.

The auto power-up feature sets the phone to automatically turn on and sound the alarm at the designated time if the phone is turned off.

Stop an alarm

When the alarm sounds,

- Drag the slider to **Stop** to stop an alarm without snooze.

- Drag the slider to **Stop** to stop an alarm with snooze or drag the slider to **Snooze** to silence the alarm for the snooze period.

Deactivate an alarm

1. In Menu mode, select **Alarms**.
2. Select **Off** next to the alarm you want to deactivate.

Use the calculator

1. In Menu mode, select **Organiser** → **Calculator**.
2. Use the keys that correspond to the calculator display to perform basic mathematical operations.

Convert currencies or measurements

1. In Menu mode, select **Organiser** → **Convertor** → a conversion type.
2. Enter the currencies or measurements and units in the appropriate fields.

Set a countdown timer

1. In Menu mode, select **Applications** → **Timer**.
2. Enter the length of time to count down.
3. Select **Start** to begin the countdown.
4. When the timer expires, drag the slider to **Stop** to stop the alerts.

Use the stopwatch

1. In Menu mode, select **Applications** → **Stopwatch**.
2. Select **Start** to begin the stopwatch.
3. Select **Lap** to record lap times.
4. When you are finished, select **Stop**.
5. Select **Reset** to clear recorded times.

Create a new task

1. In Menu mode, select **Organiser** → **Task**.
2. Select **Create task**.
3. Enter the details of the task.
4. Select **Save**.

Create a text memo

1. In Menu mode, select **Organiser** → **Memo**.
2. Select **Create memo**.
3. Enter your memo text.
4. Select **Done**.

Manage your calendar

Learn to change the calendar view and create events.

Change the calendar view

1. In Menu mode, select **Organiser** → **Calendar**.
2. Select **More** → **View by day** or **View by week**.

Create an event

1. In Menu mode, select **Organiser** → **Calendar**.
2. Select **Create schedule**.
3. Enter the details of the event as required.
4. Select **Save**.

View events

To view events of a specific date,

1. In Menu mode, select **Organiser** → **Calendar**.
2. Select a date on the calendar.
3. Select an event to view its details.

To view events by event types,

1. In Menu mode, select **Organiser** → **Calendar**.
2. Select **Schedule list**.

Select an event to view its details.

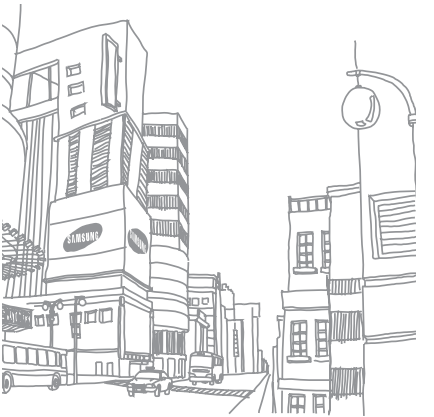

overview of menu functions

1 Call log

2 Phonebook

3 Music

1 Music player
2 Find music

4 Browser

1 Home
2 Enter URL
3 Bookmarks
4 Settings

5 Message

1 Create message
2 Inbox
3 Email inbox
4 Drafts
5 Outbox

5 Messages

6 Sentbox
7 My folders
8 Templates
9 Delete by folder
10 Settings
11 Memory status

6 My files[1]

Images
Videos
Sounds
Other files
Memory status

7 Organiser

1 Calendar
2 Memo
3 Task
4 World clock
5 Calculator
6 Convertor

8 Camera

9 Photo browser

10 Applications

1 Communities
2 FM radio
3 Games and more
4 Voice recorder
5 Bluetooth
6 Timer
7 Stopwatch
8 RSS reader

11 Alarms

12 Settings

1 Phone profiles
2 Display and light
3 Time and date
4 Phone settings
5 Smart unlock
6 Application settings
7 Security
8 Network settings
9 Memory settings
10 Reset settings

1. Additional folders will be available if you insert a memory card.

troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

While using your phone, the following messages may appear:

Message	Try this to solve the problem:
Insert SIM card to access network services	Ensure that the SIM or USIM card is installed correctly.
Phone lock	When the phone lock feature is enabled, you must enter the password you set for the phone.
PIN code	When using the phone for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card. You can disable this feature by using the **PIN lock** menu.
PUK code	Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.

Your phone displays “Service unavailable” or “Network error.”

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

You enter a number, but the call is not dialled.

- Ensure that you have pressed the Dial key: [ ].
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot reach you.

- Ensure that your phone is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot hear you speaking.

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

The phone beeps and the battery icon flashes.

Your battery is low. Recharge or replace the battery to continue using the phone.

The audio quality of the call is poor.

- Ensure that you are not blocking the phone's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

You select a contact to call, but the call is not dialled.

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.

The battery does not charge properly or sometimes the phone turns itself off.

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery.

Your phone is hot to the touch.

When you use several applications at once, your phone requires more power and may heat up.

This is normal and should not affect your phone's lifespan or performance.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

SAMSUNG ELECTRONICS

World Wide Web
http://www.samsungmobile.com

Printed in China
Code No.:GH68-25027A
English (HK). 09/2009. Rev. 1.0